

X

इंटरनेट

Disclosure to Promote the Right To Information

Whereas the Parliament of India has set out to provide a practical regime of right to information for citizens to secure access to information under the control of public authorities, in order to promote transparency and accountability in the working of every public authority, and whereas the attached publication of the Bureau of Indian Standards is of particular interest to the public, particularly disadvantaged communities and those engaged in the pursuit of education and knowledge, the attached public safety standard is made available to promote the timely dissemination of this information in an accurate manner to the public.

"जानने का अधिकार, जीने का अधिकार" Mazdoor Kisan Shakti Sangathan "The Right to Information, The Right to Live"

"पुराने को छोड नये के तरफ" Jawaharlal Nehru "Step Out From the Old to the New"


मानक

IS 7224 (2006): Iodized salt, vacuum evaporated iodized salt and refined iodized salt [FAD 8: Food Additives]



Made Available By Public.Resource.Org

 $\star \star \star \star \star \star \star$

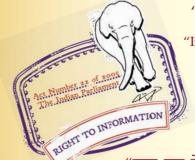

 $\star \star \star \star \star \star \star \star$

"ज्ञान से एक नये भारत का निर्माण″ Satyanarayan Gangaram Pitroda "Invent a New India Using Knowledge"

"ज्ञान एक ऐसा खजाना है जो कभी चुराया नहीं जा सकता Bhartrhari-Nītiśatakam "Knowledge is such a treasure which cannot be stolen"



BLANK PAGE



PROTECTED BY COPYRIGHT

भारतीय मानक

आयोडीनकृत नमक, निर्वात वाष्पित आयोडीनकृत नमक और रिफाइंड आयोडीनकृत नमक — विशिष्टि (दूसरा पुनरीक्षण)

Indian Standard

IODIZED SALT, VACUUM EVAPORATED IODIZED SALT AND REFINED IODIZED SALT — SPECIFICATION

(Second Revision)

ICS 67.220.20

© BIS 2006

BUREAU OF INDIAN STANDARDS MANAK BHAVAN, 9 BAHADUR SHAH ZAFAR MARG NEW DELHI 110002

October 2006

Price Group 7

FOREWORD

This Indian Standard (Second Revision) was adopted by the Bureau of Indian Standards, after the draft finalized by the Food Additives Sectional Committee had been approved by the Food and Agriculture Division Council.

This standard was first published in 1973 and covered the specification for only iodized salt. The standard was first revised in 1985, to cover iodized salt with potassium iodate or any other iodate used for iodizing the salt. The limit for iodine content was revised to 20 ppm, *Min* and a new method for determination of iodine was incorporated. The standard is now being revised to incorporate the specifications for refined iodized salt and vacuum evaporated iodized salt and making the standard more stringent.

The market for refined salt has come into existence with the growing need for pure and non-caking salt by the consumers. Refining process involves a series of physical and chemical operations to remove the impurities (soluble and insoluble). For upgrading the quality of salt, that is sodium chloride content, it requires heavy investment in plant and machinery and for improving technology. Hence, it needs to be distinguished from ordinary (unrefined) iodized salt, for enabling consumer to take informed decision.

This revision was considered necessary because in the absence of any standard on refined iodized salt in the country, many iodized salt manufacturers are marketing powdered and dried iodized salt in attractive polypacks in guise of refined iodized salt, thus duping the general public.

In the preparation of this standard, due consideration has been given to the provisions of *Prevention of Food* Adulteration Act, 1954 and Rules, 1955 and Standards of Weights and Measures (Packaged Commodities) Rules, 1977. However, this standard is subject to restrictions imposed under these Acts, wherever applicable.

For the purpose of deciding whether a particular requirement of this standard is complied with, the final value, observed or calculated, expressing the result of a test or analysis, shall be rounded off in accordance with IS 2 : 1960 'Rules for rounding off numerical values (*revised*)'. The number of significant places retained in the rounded off value should be the same as that of the specified value in this standard.

IS 7224 : 2006 IODIZED SALT, VACUUM EVAPORATED IODIZED SALT AND REFINED IODIZED SALT -SPECIFICATION

(Second Revision)

(Page 9, Annex K) - Substitute the following for the existing:

ANNEX K

[Table 1, Sl No. (x)]

DETERMINATION OF LEAD

K-1 Two methods have been specified for determination of lead - the chemical method and the atomic absorption spectrophotometric method. The atomic absorption spectrophotometric method shall be taken as referee method.

K-2 CHEMICAL METHOD

K-2.1 Apparatus

K-2.1.1 Nessler Cylinders, 50-ml capacity.

K-2.1.2 Reagents

K-2.1.2.1 Acetic acid, approximately 33 percent (wv).

K-2.1.2.2 Dilute ammonium hydroxide, approximately 4 N.

K-2.1.2.3 Potassium cyanide solution — Dissolve 10 g of potassium cyanide in 90 ml of water, add 2 ml of hydrogen peroxide (20 volume strength), allow to stand for 24 h and make up to 100 ml with water.

K-2.1.2.4 Sodium sulphide solution - Dissolve 10 g of sodium sulphide (Na2S 9H2O) in 100 ml of water.

K-2.1.2.5 Standard lead solution - Dissolve 0.160 g of lead nitrate in 5 ml of R-2.1.2.5 Standard read schanon — Dissorve 0.100 g of read nurate in 5 mi of concentrated nitric acid (conforming to IS 264) and dilute to 100 ml in a graduated flask. Again dilute 10 ml of the solution to 1 000 ml. One millilitre of the solution finally obtained contains 0.01 mg of lead (as Pb).

K-2.1.3 Procedure

K-2.1.3.1 Dissolve 4 g of the dried sample (see C-1) in water in a Nessler cylinder and add 5 ml of acetic acid. Make the mixture alkaline with dilute 1

Amend No. 1 to 1S 7224 : 2006

ammonium hydroxide and add 1 ml of potassium cyanide solution. If turbid, filter Add two drops of sodium sulphide solution and mix well. Carry out a control test in another Nessler cylinder in exactly the same manner but using 1 ml of standard lead solution in place of the dried sample. Dilute the solution in both the cylinders to 50-ml mark. Compare the colour produced in the two cylinders against a white background.

K-2.1.3.2 The material shall be taken to have not exceeded the limit specified in Table 1 if the intensity of colour obtained with the material is not greater than that obtained in the control test.

K-3 ATOMIC ABSORPTION SPECTROPHOTOMETRIC METHOD

K-3.1 Principle

Test portions are dried and then ashed at 450 C under a gradual increase (about 50 C/h) in temperature, 6 N HCI (1+1) is added and the solution is evaporated to dryness. The residue is dissolved in 0.1N HNO₃ and the analyte is determined by flame and graphite procedures.

K-3.2 Apparatus

K-3.2.1 Atomic Absorption Spectrophotometer, with an air-acetylene burner or nitrous oxide-acetylene burner for flame and a graphite furnace for electrothermal determinations with appropriate background (non-atomic correction). Instrument parameters are usually given by the manufacturer in the manual provided with the instrument.

K-3.2.2 Hollow cathode or electrodeless discharge lamps for all elements.

K-3.2.3 Furnace, programmable or muffle furnace with thermostat maintaining. 450 ± 25°C.

K-3.2.4 Hot Plate, with heating control to heat up to 300°C

K-3.2.5 Quartz or Platinum Dishes

K-3.2.6 Polystyrene Bottles, with leak proof closures - 100 ml

NOTE — Carefully clean and runse all glassware and plastic ware with HNO₅ or HCI to avoid metal contamination. First weah with water and detergent, rinse with tap water, followed by distilled water, then with dilute acid (1 + 0) and finally 3-4 times with distilled water

.....

K-3.3 Reagents

K-3.3.1 Water, redistilled or deionized

K-3.3.2 20 Percent Sulphuric Acid

Amend No. 1 to IS 7224 : 2006

K-3.3.3 Hydrochloric Acid A.R. (6N) — Dilute 500 ml hydrochloric acid to one litre with water.

K-3.3.4 Nitric Acid A.R. 0.1M - Dilute 7 ml concentrated acid to one litre

K-3.3.5 Nutric Acid Concentrated (Sp. Grade 1.40)

K-3.3.6 Lead Standard Solution – 1 mg/ml — Dissolve 1.000 g Pb in 7 ml concentrated HNO₁ in one litre volumetric flask. Dilute to volume with water. Commercially available standard solutions for AAS may be used for all metal standards.

K-3.3.7 Working Standard Solution — For graphite furnace analysis dilute standard solutions with 0.1 M HNO₃ to a range of standards that cover the linear range of the elements to be determined. For Flame analysis dilute standard solutions with 0.1 M HNO₃ to a range of standards that covers the concentration of the elements to be determined.

K-3.4 Procedure

K-3.4.1 Preparation of Sample

Weigh accurately about 25 g of well homogenized sample into a clean silica dish. Add 25 ml of 20 percent sulphuric acid. Mix thoroughly with a glass stirring rod ensuring all sample material is wetted by the acid. Rinse stirring rod with water into silica dish. Dry the contents of the dish thoroughly on a steam bath or in an oven around 110°C. When the sample is thoroughly dried, heat the contents of the dish with a soft flame (such as that of a Bunsen burner) until all volatile or readily combustible matter has been removed. Transfer the dish to a furnace set at 250°C. Slowly raise temperature to 500°C. Ash at this temperature for about 6 to 8 hours. Remove the dish and cool. Ash should now be white or brownish red and essentially be carbon free. If ash contains carbon particles, wash down sides of dish with water and add 2 ml of HNO3 and mix well. Dry thoroughly on hot plate. Return dish to furnace at 500°C and ash for 30 min. Repeat nitric acid treatment using 1 ml increments of HNO3 until white/brownish red, carbon free ash is obtained. When clean ash is obtained, remove the dish from furnace, cool and add 1 ml HNO3 and 10 ml of water. Heat on hot plate till sample ash is dissolved. Quantitatively transfer the contents of the dish to a 100-ml volumetric flask, heat the dish with 10 ml of HCl (1+1) and transfer the solution again to the same volumetric flask to volume with water.

Prepare sample blank solution by following the same procedure as described for sample. Use same quantities of reagents including water for both sample and

3

Amend No. 1 to IS 7224 :	2006		
slank. Subject both sample length of time kept in furnal	and sample blank to identical treat	nent (even the	
NOTES 1 Do not ash HNO, in furni then ash in furniage	are Always dry HNO_1 (in the dish) on steam \mathfrak{h}	th or hot plane and	
	ute during any stage of ashing		
	be sample is both they avoid the use of out-b	mc acid (Ash aid)	
K-3.4.2 Determination			
Atomic Absorption Spectro graphite furnace AAS (GFA	ophotometry — Lead in foods gen AS) for determination.	rally requires	
the instrument) The	per the previously established optimur ven in the Instruction Manual (provid le standard conditions for Atomi e wavelength of 217.0 and air – acety	ed along with	
b) Determine absorbance	of sample solution(s) and blank.		
	etal content from standard curve.		
K-3.4.3 Preparation of Stan			
Ausorption Spectrophotome	series of standard metal solutions i ter after setting the instrument as igainst µg of metal/ml solution.	n the Atomic per optimum	
(FAD.8)			
	Reprography Unit, BIS,	New Deitti, India	

Indian Standard

IODIZED SALT, VACUUM EVAPORATED IODIZED SALT AND REFINED IODIZED SALT — SPECIFICATION

(Second Revision)

1 SCOPE

This standard prescribes the requirements and the methods of sampling and test for iodized salt, vacuum evaporated iodized salt and refined iodized salt.

2 REFERENCES

The following standards contain provisions which, through reference in this text, constitute provisions of this standard. At the time of publication, the editions indicated were valid. All standards are subject to revision and parties to agreements based on this standard are encouraged to investigate the possibility of applying the most recent editions of the standards indicated below:

IS No.	Title
264 : 1976	Nitric acid (second revision)
323 : 1959	Rectified spirit (first revision)
1070 : 1992	Reagent grade water (third revision)
2088 : 1983	Methods for determination of arsenic (second revision)
4905 : 1968	Methods for random sampling

3 TYPES

Iodized salt shall be of the following three types:

- a) Refined iodized salt,
- b) Vacuum evaporated iodized salt, and
- c) Iodized salt.

4 REQUIREMENTS

4.1 Description

4.1.1 Refined Iodized Salt

Refined iodized salt is solar/rock salt from which soluble and insoluble impurities are reduced by employing mechanical washing, centrifuging and iodizing, drying, sieving, coating with permitted anticaking agents as prescribed under the *PFA Rules*, 1955. It shall be free from visible contamination with clay, grit or other extraneous adulterants or impurities.

4.1.2 Vacuum Evaporated Iodized Salt

Vacuum evaporated iodized salt is made by evaporating brine employing forced evaporators operating under vacuum, centrifuging iodizing, drying and coating with permitted anticaking agents as permitted under the *PFA Rules*, 1955. It shall be free from visible contamination with clay, grit or other extraneous adulterants or impurities.

4.1.3 Iodized Salt

Iodized salt is solar/rock salt mixed with iodizing chemical and dried if required. Material shall be a crystalline solid, white or pale pink and light grey in colour. It shall be free from visible contamination with clay, grit or other extraneous adulterants or impurities.

4.2 Particle Size

For iodized salt, minimum 95 percent by mass of the material shall pass through 4.00 mm IS sieve. For refined iodized salt, minimum 95 percent of the material shall pass through 1 mm IS sieve and not more than 10 percent by mass shall pass through 150 micron IS sieve.

4.3 The material shall also comply with the requirements given in Table 1 when dried in accordance with the method prescribed in Annex A.

4.4 The material may contain anticaking agents as permitted under the *PFA Rules*, 1955 subject to a maximum 2 percent by mass, either singly or in combination. Further, when calcium, potassium or sodium ferrocyanide are used as crystal modifiers and anticaking agents, their quantity should not exceed 10 mg/kg, on dry basis, either singly or in combination expressed as ferrocyanide when tested by the method prescribed in Annex B.

5 PACKING AND MARKING

5.1 Packing

5.1.1 The material shall be packed in jute bags having inside polyethylene liner or HDPE bags or in packages as agreed to between the purchaser and the supplier.

SI No.	Characteristic	Requirements		Method of Test, Ref to
		Refined Iodized Salt/Vacuum Evaporated Iodized Salt	Iodized Salt	
(1)	(2)	(3)	(4)	(5)
i)	Moisture, percent by mass, Max	0.5	6.0	Annex A
ii)	Water insoluble matter, percent by mass, on dry basis, Max	1.0	1.0	Annex C
iii)	Chloride content (as NaCl), percent by mass, on dry basis, <i>Min</i>	98.5	96.0	Annex D
iv)	Matter soluble in water other than sodium chloride, percent by mass, on dry basis, Max	1.0	3.0	Annex E
v)	Calcium (as Ca), percent by mass, on dry basis, Max	0.15	_	Annex F
vi)	Magnesium (as mg), percent by mass, on dry basis, Max	0.10		Annex F
vii)	Sulphate (as SO ₄), percent by mass, Max	0.60		Annex G
viii)	lodine content, ppm, Min			Annex H
	Manufacturer's level	30	30	
	Distribution channel including retail level	15	15	
ix)	Alkalinity (as Na ₂ CO ₃), percent by mass, Max	0.15	0.15	Annex J
x)	Lead (as Pb), ppm, Max	2.0	2.5	Annex K
xi)	Arsenic (as As), ppm, Max	1.0	1.0	Annex L
xii)	Iron (as Fe), ppm, Max	50	50	Annex M

Table 1 Requirements for Refined Iodized Salt, Vacuum Evaporated Iodized Salt and Iodized Salt

(Clause 4.3)

For consumer packing, the material shall be packed in food grade plastics (*see* relevant Indian Standards). The thickness of the plastic film used for packing shall be not less then 50 microns.

5.2 Marking

5.2.1 The packages shall be legibly and clearly marked with the following particulars:

- a) Name and type of product;
- b) Name and address of the manufacturer;
- c) Batch or Code number;
- d) Iodizing agent used;
- e) Iodine content when packed;
- f) Date of manufacturing (month and year);
- g) Best before date;
- h) Net mass;
- j) Instructions for storage 'Store in a cool and dry place'; and
- k) Any other details required under the *Standards* of Weights and Measures (Packaged Commodities) Rules, 1977 and Prevention of Food Adulteration Rules, 1955.

5.2.2 BIS Certification Marking

The product may also be marked with the Standard Mark.

5.2.2.1 The use of the Standard Mark is governed by the provisions of the *Bureau of Indian Standards Act*, 1986 and the Rules and Regulations made thereunder. The details of conditions under which the licence for the use of the Standard Mark may be granted to manufacturers or producers may be obtained from the Bureau of Indian Standards.

6 SAMPLING

Representative samples of the material for testing its conformity to this standard shall be drawn according to the method prescribed in Annex N.

7 QUALITY OF REAGENTS

Unless specified otherwise, pure chemicals and distilled water (see IS 1070) shall be employed in tests.

NOTE — 'Pure chemicals' shall mean chemicals that do not contain impurities which affect the results of analysis.

ANNEX A

[*Clause* 4.3, and *Table* 1, *Sl No.* (i)]

DETERMINATION OF MOISTURE CONTENT

A-1 PROCEDURE

A-1.1 Grind rapidly the sample material as received (say 100 g), if required, in an agate mortar approximately to a size of 2.8 mm IS Sieve, but do not actually sieve. The material which shall be in the form of powder shall be kept in an air-tight container.

A-1.2 Weigh accurately about 20 g of the material in a weighing bottle (about 30 ml capacity), preferably wide mouth squat type, previously dried and weighed. Dry in an oven at 140 to 150°C for at least 4 h. Cool in

a desiccator and weigh. Repeat drying, cooling and weighing until constant mass is obtained.

A-2 CALCULATION

Moisture, percent by mass =
$$\frac{M_1 - M_2}{M_1} \times 100$$

where

- M_1 = mass in g of the material taken for the test, and
- M_2 = mass in g of the material after drying in the oven.

ANNEX B

(Clause 4.4)

DETERMINATION OF FERROCYANIDE

B-0 GENERAL

This test is designed for 15 ppm of ferrocyanide $[expressed as K_4Fe(CN)_6]$.

B-1 REAGENTS

B-1.1 Dilute Sulphuric Acid — About 0.5 N solution.

B-1.2 Ferrous/Ferric Solution — Dissolve 20 g of ammonium ferrous sulphate $[(NH_4)_2SO_4.FeSO_4. 6H_2O]$, and 2.5 g of ammonium ferric sulphate $[(NH_4)_2 SO_4.Fe_2(SO_4).24H_2O]$, in water to which 10 ml of the dilute sulphuric acid has been added. Dilute to 100 ml with water, filter and store in a dark bottle.

B-1.3 Phosphate Solution — Dissolve 70 g of potassium dihydrogen phosphate in water, add 50 ml of the dilute sulphuric acid and make up to 1 000 ml with water.

B-1.4 Sodium Chloride — Before use, heat at 500°C for 2 h in a furnace, and allow to cool.

B-1.5 Standard Potassium Ferrocyanide Solution

B-1.5.1 Ferrocyanide Stock Solution — Dissolve

2.294 g of potassium ferrocyanide trihydrate, $[K_4Fe(CN)_6.3H_2O]$ in water, add 5 ml of dilute potassium hydroxide solution (about 0.1 N) and dilute to 1 000 ml with freshly boiled and cooled water. Store in the dark.

B-1.5.2 Ferrocyanide Working Solution — Take 25 ml of the ferrocyanide stock solution, add 5 ml of potassium hydroxide solution (about 0.1 N) and dilute to 1 000 ml with freshly boiled and cooled water.

 $1 \text{ ml} = 0.05 \text{ mg } \text{K}_{4} \text{Fe}(\text{CN})_{6}$

B-2 PROCEDURE

Dissolve 10 ± 0.1 g of the salt (see A-1.1) in about 40 ml of water in a Nessler cylinder graduated at 100 ml. Add 10 ml of the dilute sulphuric acid and 5 ml of the ferrous/ferric solution, mixing well after each addition. Allow to stand for about 2 min, then add 35 ml of the phosphate solution, mix, dilute to the 100 ml mark and mix again. The colour shall not be greater than the 15 ppm K₄Fe(CN)₆ standard which is prepared similarly using 10 g of the sodium chloride reagent to which has been added 3 ml of the ferrocyanide working solution in place of the 10 g of sample.

ANNEX C

[Table 1, Sl No. (ii)]

DETERMINATION OF MATTER INSOLUBLE IN WATER

C-1 PREPARATION OF THE SAMPLE FOR CHEMICAL TESTS

Spread 80 to 100 g of the sample (see A-1.1) in a petri dish and dry by the method given in A-1.2. The dried material shall be called the dried sample and shall be used in the tests where so indicated.

C-2 PROCEDURE

Accurately weigh about 20 g of the dried sample, dissolve it in 200 ml of water in a beaker and heat to boiling and cool. Filter the solution through a weighed Gooch or sintered glass crucible (G No. 4) and wash the residue till it is free from soluble salts. Collect the filtrate and washings in a one-litre graduated flask and dilute to mark. Preserve the solution so obtained for subsequent tests. Dry the crucible along with the insoluble residue to constant mass.

C-3 CALCULATION

Matter insoluble in water, percent by mass = $\frac{M_1}{M} \times 100$

where

 M_1 = mass in g of the residue, and

 M_2 = mass in g of the dried sample taken for the test.

C-3.1 Insoluble matter in water, percent by mass, is calculated on moisture-free basis. However, in the case of refined iodized salt, insoluble matter in water, percent by mass, also includes the free-flowing agents added to the salt.

ANNEX D

[Table 1, Sl No. (iii)]

DETERMINATION OF TOTAL CHLORIDES

D-1 REAGENTS

D-1.1 Potassium Chromate Indicator Solution — 5 percent.

D-1.2 Standard Silver Nitrate Solution - 0.1 N.

D-2 PROCEDURE

Transfer 10 ml of the solution reserved in C-2 into a conical flask and add 1 ml of potassium chromate indicator solution. Titrate against standard silver nitrate solution till the reddish brown tinge persists after brisk shaking. Carry out a blank determination.

D-3 CALCULATION

Total chloride (as Cl), percent by mass (on dry basis) = $\frac{VN}{M} \times 354.6$

where

- V = volume in ml of standard silver nitrate solution used in the titration with the material, corrected to blank;
- N = normality of standard silver nitrate solution; and
- M = mass in g of the dried sample in 1 000 ml of the solution taken for the test.

ANNEX E

[Table 1, Sl No. (iv)]

DETERMINATION OF MATTER SOLUBLE IN WATER OTHER THAN SODIUM CHLORIDE

E-1 PROCEDURE

Express the soluble carbonate as calcium carbonate (marine salt), or as sodium carbonate (Rajasthan salt, in absence of calcium and magnesium). If there is excess of calcium over the calcium carbonate. combine all the calcium with the sulphate radical and express the result as percentage of calcium sulphate. If there is excess of the sulphate over what is required for calcium, combine all the calcium with the sulphate radical and express the result as percentage of calcium sulphate. If there is excess of the sulphate over what is required for calcium, combine the excess with magnesium and express the result as percentage of magnesium sulphate. Calculate the balance of magnesium as magnesium chloride and deduct the chloride corresponding to it from the chloride content. Also, deduct from the chloride content an amount of chloride corresponding to potassium content and express it as percentage of potassium chloride.

Calculate the residual chlorine as percentage of sodium chloride.

E-2 CALCULATION

E-2.1 In the above procedure, if there is excess of sulphate over the calcium and magnesium sulphate, express it as sodium sulphate, and if there is excess of calcium over the calcium sulphate, express it as calcium chloride. This situation does not arise commonly in the analysis of common salt.

E-2.2 In the absence of calcium and magnesium, express carbonate as sodium carbonate and sulphate as sodium sulphate.

E-2.3 Calculate the matter soluble in water other than sodium chloride by subtracting from the 100 the sum of sodium chloride content and matter insoluble in water. Matter soluble in water includes the water of hydration retained at the temperature drying.

ANNEX F

[Table 1, Sl No. (v) and (vi)]

DETERMINATION OF CALCIUM AND MAGNESIUM

F-1 REAGENTS

F-1.1 Standard Calcium Solution — Weigh 1.0 g of calcium carbonate dried at 120° C and dissolve it in the minimum quantity of dilute hydrochloric acid. Dilute the solution to one litre in a graduated flask. One millilitre of the solution is equivalent to 0.400 8 mg of calcium (as Ca).

F-1.2 Standard EDTA Solution — Dissolve 3.72 g of disodium ethylene diamine tetra acetate dihydrate in water and dilute in a graduated flask to 1 litre. The solution shall be standardized frequently against standard calcium solution following the procedure given in **F-2**.

F-1.3 Eriochrome Black T Indicator Solution — Dissolve 0.1 g of the dye in 20 ml of rectified spirit F-1.4 Dilute Sodium Hydroxide Solution — Approximately 10 percent.

F-1.5 Murexide Indicator Solution — Grind 0.2 g of murexide with 10 g of sodium chloride until the mixture is homogeneous. Thus 0.2 g of the mixture is suitable for 100 ml of the sample solution.

F-1.6 Patton and Reader's Indicator — Grind thoroughly 1 g of Patton and Reader's Indicator (calcon carboxylic acid) and 100 g AR anhydrous sodium sulphate powders in a grinder and mix the two solid powders thoroughly. Transfer the mixture to a dry airtight container. Use 1 g of this solid mixture for every titration for calcium analysis.

F-1.7 Ammonium Chloride — Ammonium Hydroxide Buffer Solution — Dissolve 67.5 g of ammonium dissolve separately a mixture of 0.931 g of disodium ethylene diamine tetra acetate dihydrate and 0.616 of magnesium sulphate (MgSO₄.7H₂O) in about 50 ml of water. Mix the two solutions and dilute to 1 litre.

NOTE — Five millilitres of buffer solution added to 50 ml of distilled water should not consume more than a drop of EDTA solution to change to distinct blue with eriochrome black T indicator.

F-2 PROCEDURE

F-2.1 Standardization of EDTA Solution

Transfer 25 ml of standard calcium solution into a 250 ml conical flask, add 25 ml of water, 10 ml of ammonium chlcride-ammonium hydroxide buffer solution, 5 drops of the eriochrome black T indicator solution and titrate against the standard EDTA solution to a pure blue end point.

F-2.2 Titrate 25 ml of the buffer solution with EDTA solution using eriochrome black T indicator. Subtract the buffer correction for 10 ml (usually it will be 0.1 ml) from the reading obtained in **F-2.1** and note the final titre value. Calculate the calcium equivalent of 1 ml of EDTA solution (say A).

F-3 DETERMINATION OF CALCIUM AND MAGNESIUM

F-3.1 Transfer exactly 100 ml of the solution preserved in C-2 into a 250 ml conical flask and 10 ml of ammonium chloride-ammonium hydroxide buffer solution, 5 drops of eriochrome black T indicator solution and titrate against standard EDTA solution till wine red colour of the solution changes to pure blue end point. Note the EDTA solution (V_1) used in the titration.

F-3.2 Transfer exactly 100 ml of the solution preserved in **C-2** into 250 ml conical flask and 5 ml sodium hydroxide solution and stir well. Add 0.2 g murexide (or 1 g Patton and Reader's Indicator as in **F-1.6**) and titrate against standard EDTA solution till wine red colour of the solution changes to pure blue end point. Note the volume of the standard EDTA solution (V_2) used in the titration.

F-4 CALCULATION

Calcium (as Ca), percent by mass (on dry basis) = $\frac{A \times V_2}{M}$

Magnesium (as mg), percent by mass (on dry basis) = $\frac{A \times (V_1 - V_2)}{M} \times 0.606 8$

where

- A = calcium equivalent in mg of 1 ml of EDTA solution determined in F-2.2,
- V_1 = volume in ml of standard EDTA solution used in F-3.1,
- V_2 = volume in ml of standard EDTA solution used in F-3.2 (for Ca only), and
- M = mass in g of the dried sample taken for the test in C-2.

ANNEX G

[Table 1, Sl No. (vii)]

DETERMINATION OF SULPHATE

G-1 GRAVIMETRIC METHOD

G-1.1 Reagents

G-1.1.1 Dilute Hydrochloric Acid — Approximately 4 N.

G-1.1.2 Barium Chloride Solution — Approximately 10 percent.

G-1.2 Procedure

Dissolve about 10 g of dried salt in about 400 ml of water, filter and wash the residue free from soluble salts. Collect the filtrate and washings. Add one drop of methyl orange and 10 ml of dilute hydrochloric acid

or more till it is pink and then boil. Add to the boiling solution, 10 to 12 ml barium chloride solution drop by drop so that the addition is in slight excess and continue boiling for 4 min to obtain a granular precipitate. Allow to stand for 4 h and filter through a weighed sintered glass crucible (G No. 4) or Gooch crucible. Wash the precipitate till free from chloride and dry to constant mass at 105 to 110°C. Alternatively, filter through Whatman filter paper No. 42 and wash till it is free from chloride. Ignite and determine as barium sulphate.

G-1.3 Calculation

Sulphate (as SO₄), percent by mass =
$$\frac{M_1}{M_2} \times 41.13$$

. .

where

 M_1 = mass in g of barium sulphate, and M_2 = mass in g of dried sample taken for test.

G-2 VOLUMETRIC METHOD

G-2.1 Reagents

G-2.1.1 Standard Barium Chloride Solution — 0.05 N. Dissolve 6.108 g of barium chloride dihydrate (BaCl,.2H,O) in water and make up to 1 litre.

G-2.1.2 Dilute Hydrochloric Acid — Approximately 1 N.

G-2.1.3 Standard EDTA Solution — Weigh 3.72 g of disodium ethylene diamine tetra acetate dihydrate in water and dilute in a graduated flask to 1 litre. The solution shall be standardized frequently against standard barium chloride solution (G-2.1.1) and follow the procedure given in F-3. One millilitre of standard EDTA solution is equal to 0.001 374 g of Ba or 0.000 96 g of SO₄.

G-2.1.4 Eriochrome Black T Indicator Solution — Same as in F-1.3.

G-2.1.5 Ammonium Chloride-Ammonium Hydroxide Buffer Solution — Same as in **F-1.7**.

G-2.2 Procedure

G-2.2.1 Pipette out 20 ml of standard barium chloride solution into a conical flask, add 2 drops of hydrochloric acid and 10 ml of ammonium chloride-

ammonium hydroxide buffer solution. Dilute it with water to about 50 ml, add five drops of eriochrome black T indicator solution and titrate against standard EDTA solution to pure blue end point. Note the titre value (say A).

G-2.2.2 Pipette out 100 ml of the solution preserved in **C-2** and add two drops of hydrochloric acid and heat to gentle boiling. To the hot solution, add with a pipette 20 ml standard barium chloride solution. Boil gently for about 5 min and then cool to room temperature. The solution will be neutral or slightly acid when tested with a litmus paper filtration. Add 10 ml of ammonium chloride-ammonium hydroxide buffer solution and five drops of eriochrome black T indicator solution. Titrate against standard EDTA solution to pure blue end point. Note the titre value (say *B*).

G-2.3 Calculation

Sulphate (as SO₄), percent
by mass (on dry basis) =
$$\frac{A + V_1 - B}{M} \times 0.96$$

where

- A = volume in ml of standard EDTA solution used in G-2.2.1;
- V_{1} = volume in ml of standard EDTA solution used in F-3.2 (total Ca + mg);
- B = volume in ml of standard EDTA solution used in the titration in **G-2.2.2**; and
- M = mass in g of the dried sample taken for the test in C-2.

ANNEX H

[Table 1, Sl No. (viii)]

DETERMINATION OF IODINE

H-1 REAGENTS

H-1.1 Methyl Orange Indicator — Dissolve 0.01 g methyl orange in water and dilute to 100 ml.

H-1.2 Dilute Sulphuric Acid — Approximately 2 N.

H-1.3 Bromine Water — Saturated aqueous solution. Determine the approximate concentration (milligram of bromine per millilitre) by adding (from a burette) measured volume to a flask containing 5 ml of 10 percent potassium iodide solution and 5 ml dilute sulphuric acid and titrating the liberated iodine with 0.1 N sodium thiosulphate solution. One millilitre of 0.1 N Na₂S₂O₃ = 8 mg of bromine = 12.7 mg of iodine.

H-1.4 Sodium Sulphite Solution — Approximately 1 percent (m/v).

H-1.5 Phenol Solution — Approximately 5 percent (m/ν) .

H-1.6 Potassium Iodide Solution — Approximately 10 percent (m/v).

H-1.7 Standard Sodium Thiosulphate Solution — 0.005 N. Prepare 0.1 N solution by dissolving 25 g of sodium thiosulphate AR grade in 1 000 ml water. Further, dilute 50 ml of this solution to 1 000 ml to give 0.005 N solution.

IS 7224 : 2006

H-1.8 Starch Solution - One percent, freshly prepared (m/v).

H-1.9 Sodium Chloride Solution — Dissolve 50 g AR grade sodium chloride (free from iodine) in water and make up the volume to 250 ml.

H-1.10 Potassium Iodide for Control Determination - Dissolve 0.327 0 g potassium iodide in water and make up the volume to 250 ml. Dilute 50 ml of this solution to 250 ml, and use 5 ml (1.0 mg iodine and 1.308 mg potassium iodide) for control determination.

H-2 PREPARATION OF SAMPLE SOLUTION

Dissolve 100 g accurately weighed material in water and make up the volume to the mark in a 500 ml onemark graduated flask. Take 100 ml of this solution for test under H-3.

H-3 PROCEDURE

H-3.1 Method A (Referee Method)

H-3.1.1 Pipette 100 ml of the prepared sample solution (20 g NaCl content) (see H-2) into 200 ml conical flask. Neutralize to methyl orange indicator with dilute 2 N sulphuric acid. Add bromine water dropwise from burette in a quantity equivalent to 20 mg of bromine. After a few minutes, destroy most of the remaining free bromine by adding sodium sulphite solution dropwise while mixing to pale yellow colour. Wash down the neck and sides of the flask with water and completely remove free bromine by addition of 1 or 2 drops of phenol solution.

H-3.1.2 Add 1 ml of dilute sulphuric acid and 5 ml of potassium iodide solution and titrate the liberated iodine against standard sodium thiosulphate solution, adding 1 ml starch solution near the end of titration. Carry out a blank determination on reagents, make one or more control determinations, using 100 ml sodium chloride solution to which has been added appropriate quantity of potassium iodide control solution.

H-3.1.3 Calculation

Iodine (I), ppm
(on dry basis) =
$$\frac{528.75 \times (V_1 - V_2) \times F}{M \times (100 - m)} \times 100$$

where

- V_1 = volume in m1 of standard sodium thiosulphate solution required for the test with the prepared sample solution,
- V_2 = volume in ml of standard sodium thiosulphate solution required for the blank determination.
- actual normality of sodium thiosulphate
- nominal normality of sodium thiosulphate'
- M = mass in g of the material taken for the test, and
- m = percentage moisture content calculated as perAnnex A.

H-3.2 Method B (Alternate Method when Iodate is Used for Iodizing the Salt)

H-3.2.1 Accurately weigh about 20 g of salt sample. Dissolve it in about 100 ml water. Acidify with 10 ml of dilute 2 N sulphuric acid. Add 10 ml of 10 percent potassium iodide solution. Titrate the liberated iodine against standard 0.005 N sodium thiosulphate solution adding 2 ml of starch solution near the end of titration. The solution will turn yellow if iodine is present. Stopper the flask and place it in the dark for 10 min (This is to avoid side reaction from occurring which can generate more iodine from iodide by exposure to light). Remove the flask from dark place.

H-3.2.2 Calculation

lodine (I), ppm

$$(\text{on dry basis}) = \frac{105.7 \times V_1 \times F}{M \times (100 - m)} \times 100$$

where

 V_1 = volume in ml of 0.005 N sodium thiosulphate solution required for titration;

 $F = \frac{\text{actual normality of sodium thiosulphate}}{\text{nominal normality of sodium thiosulphate}};$

- M = mass, in g, of the salt sample taken for analysis; and
- m = percentage moisture content calculated as per Annex A.

ANNEX J

[Table 1, Sl No. (ix)]

DETERMINATION OF ALKALINITY

J-1 REAGENTS

J-1.1 Standard Hydrochloric Acid - 0.1 N.

J-1.2 Methyl Orange Indicator — Dissolve 0.1 g of methyl orange in 100 ml of water.

J-2 PROCEDURE

J-2.1 Procedure for Common Salt

Pipette out 100 ml of the solution, preserved in C-2

and titrate against standard hydrochloric acid using methyl orange as indicator.

J-3 CALCULATION

Alkalinity (as Na₂CO₃), percent by mass = $5.3 \frac{V}{M}$

where

- V = volume in ml of standard hydrochloric acid used in the titration, and
- M = mass in g of the prepared sample taken for the test.

ANNEX K

[Table 1, Sl No. (x)]

DETERMINATION OF LEAD

K-1 APPARATUS

K-1.1 Nessler Cylinders — 50 ml capacity.

K-2 REAGENTS

K-2.1 Acetic Acid — Approximately 33 percent (v/v).

K-2.2 Dilute Ammonium Hydroxide — Approximately 4 N.

K-2.3 Potassium Cyanide Solution — Dissolve 10 g of potassium cyanide in 90 ml of water, add 2 ml of hydrogen peroxide (20 volume strength), allow to stand for 24 h and make up to 100 ml with water.

K-2.4 Sodium Sulphide Solution — Dissolve 10^og of sodium sulphide (Na₂S.9H₂O) in 100 ml of water.

K-2.5 Standard Lead Solution — Dissolve 0.160 g of lead nitrate in 5 ml of concentrated nitric acid (conforming to IS 264) and dilute to 100 ml in a graduated flask. Again dilute 10 ml of the solution to

1 000 ml. One millilitre of the solution finally obtained contains 0.01 mg of lead (as Pb).

K-3 PROCEDURE

K-3.1 Dissolve 4 g of the dried sample (see C-1) in water in a Nessler cylinder and add 5 ml of acetic acid. Make the mixture alkaline with dilute ammonium hydroxide and add 1 ml of potassium cyanide solution. If turbid, filter. Add two drops of sodium sulphide solution and mix well. Carry out a control test in another Nessler cylinder in exactly the same manner but using 1 ml of standard lead solution in place of the dried sample. Dilute the solution in both the cylinders to 50 ml mark. Compare the colour produced in the two cylinder against a white background.

K-3.2 The material shall be taken to have not exceeded the limit specified in Table 1 if the intensity of colour obtained with the material is not greater than that obtained in the control test.

ANNEX L

[Table 1, Sl No. (xi)]

DETERMINATION OF ARSENIC

L-1 METHOD I (GUTZEIT METHOD)

Weigh accurately 1.00 g of the material and dissolve in 10 ml of water and carry out the test for arsenic as prescribed in IS 2088 using 0.001 32 mg of arsenic trioxide (As_2O_3) for preparing the comparison stain.

9


L-2 METHOD 11 (SILVER DIETHYL DITHIOCARBAMATE RED COMPLEX B ABSORPTIOMETRIC METHOD)

L-2.1 Principle

Arsenic reacts with a solution of silver diethyl dithiocarbamate, [(C,H₅),NCS₂Ag] in pyridine to form a soluble red complex which has an absorption maximum at 540 (nm) nanometre. The arsenic shall be in the trivalent state in the sample which is secured by reducing the arsenate with potassium iodide and stannous chloride in acid media. The arsenic is converted into arsine by the treatment of hydrochloric acid and zinc and evolved arsine is absorbed in the reagent to form a red complex. Using any standard photoelectric absorptiometer, absorption measurement is done at 540 nm, with coloured red complex solution against blank reagent solution for total transmittance. From the transmittance or optical density obtained with known arsenic content covering the 0-10 µg, standard calibration graph is prepared by plotting the percent transmittance or optical density or logarithm of percent transmittance (log T) against known concentration. As it obeys Beer's Law, log T or the optical density are directly proportional to the concentration and only a few points are required to establish the graph for the determination of arsenic under the experimental condition.

L-2.2 Apparatus

The evolution and absorption apparatus as shown in Fig. 1 shall consist of the following.

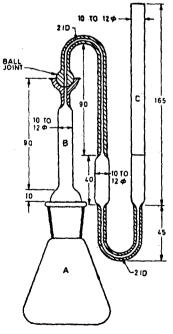

All dimensions in millimetres.



L-2.2.1 Conical Flask — 100 ml for the evolution of arsine (A).

L-2.2.2 Connection Tube — To trap hydrogen sulphide (B).

L-2.2.3 Absorption Tube (C)

L-2.2.4 Spring Clip — To secure the joint connecting B to C. (It may be either ground cone-socket joint or ball joint with hooks).

L-2.3 Spectrophotometer or Photoelectric Absorptiometer

L-2.4 Reagents

L-2.4.1 Potassium Iodide — 150 g/l solution. Store in a dark place.

L-2.4.2 Stannous Chloride Solution

L-2.4.3 Zinc Shots - Arsenic-free.

L-2.4.4 Silver Diethyl Dithiocarbamate — 5 g/l solution in pyridine. Dissolve 1 g of silver diethyl dithiocarbamate (SDDC) in pyridine (relative density 0.980 approximately) and dilute to 200 ml with pyridine. Store in a well stoppered glass bottle protected from light. This solution is stable for two months (see Note).

NOTE — If suitable reagent is not available, it may be prepared from sodium diethyl dithiocarbamate by the method given below:

- a) Purification of sodium diethyl dithiocarbamate Dissolve 10 g sodium diethyl dithiocarbamate $[(C_2H_5)_2NCS_2Na.3H_2O]$ in 35 ml of ethanol (95 percent ν/ν) and filter. Add to this solution with continual stirring, 100 ml of diethyl ether. Filter with suction, wash the precipitate with ether and dry in air.
- b) Preparation of the reagent Dissolve 2.25 g sodium diethyl dithiocarbamate in 100 ml water. Dissolve 1.7 g of silver nitrate in 100 ml water. Mix the two solutions slowly with continuous agitation. Keep the mixture at a temperature below 10°C. Filter with the aid of suction pump and dry the product in vacuum at room temperature. Preserve in a cool place protected from light. The solution is unsatisfactory if the optical density is less than 0.03 µg of arsenic using 5 ml of this solution.

L-2.5 Procedure

L-2.5.1 Transfer 10 ml of the standard arsenic solution containing 10 μ g of arsenic and 10 ml of the concentrated hydrochloric acid into a 100 ml conical flask *A* and dilute it approximately to 40 ml with water. Add 2 ml of the potassium iodide solution (L-2.4.1) and 0.5 ml of the stannous chloride solution (L-2.4.2). Mix and allow to stand for 15 min. Place some dry lead acetate paper in the lower portion of the connection tube *B* and glass wool (or cotton) moistened with lead acetate solution in its upper portion. Assemble the apparatus. Transfer 5.0 ml of silver diethyl

dithiocarbamate solution to the absorption tube. After 15 min standing period, introduce 5 g of the zinc shots (L-2.4.3) into the conical flask A and rapidly replace the cone into the neck of the flask. Allow the reaction to continue for 45 min. Disconnect the absorption tube C and tilt the absorber tube so that the reagent solution flows back and forth between the absorber and bulb to dissolve any red complex and to thoroughly mix the solution. Transfer the solution to the photometric cell. Absorption measurement is done at 540 nm with 5 ml coloured red complex solution in a cell of 1 cm thickness against blank reagent solution for total transmittance. Volume and optical path of the comparison cell shall be the same for both the measurements and may be adjusted to suit the instrument. Alternatively, record its optical density at 540 nm as both are calibrated on the scale.

L-2.5.2 Transfer 10 g of the dried sample into the conical flask and carry out the procedure as described above. With the absorbed solution, measure its percent transmittance or optical density at 540 nm against total transmittance for the reagent. Since the colour is not stable, measurement of optical density or percent transmittance shall be done immediately.

L-2.5.3 The material shall be taken to have not exceeded the limit prescribed in Table 1 if the percent

transmittance is more than the percent transmittance obtained for 10 ml of standard arsenic solution ($10 \mu g$). If the optical density with the sample is less than the optical density obtained with 10 ml of standard solution, it passes the limit test of 1 ppm arsenic.

L-2.5.4 Plotting and Determination of Arsenic

If it is desired to know the exact amount of arsenic, determine the percent transmittance or optical density for another standard solution containing 5 μ g of arsenic. Since it obeys Beer's Law, draw a graph plotting the logarithm of the percent transmittance (log T) or optical density determined for the standard solution against their arsenic content. Straight line is obtained passing the points obtained for 0, 5 and 10 μ g of arsenic. From the graph, read the amounts of arsenic corresponding to the respective percent transmittance or optical density of the sample and blank solution.

L-2.5.5 Calculation

in $\mu g/g$ (ppm)

Arsenic content in the sample

$$= 0.1 (M_1 - M_2)$$

where

 M_1 = mass in µg in the sample, and M_2 = mass in µg in the blank.

ANNEX M

[Table 1, Sl No. (xii)]

DETERMINATION OF IRON

M-1 APPARATUS

M-1.1 Nessler Cylinders — 50 ml capacity.

M-2 REAGENTS

M-2.1 Thioglycollic Acid — Containing not less than 97 percent of thioglycollic acid by mass.

M-2.2 Concentrated Ammonium Hydroxide — Relative density 0.90.

M-2.3 Standard Iron Solution — Dissolve 2.81 g of ferrous ammonium sulphate $[FeSO_4.(NH_4)_2SO_4.6H_2O]$ in water, add a few millilitres of dilute sulphuric acid and dilute to 1 000 ml with water.

M-2.4 Dilute Standard Iron Solution — Dilute 10 ml of the standard iron solution (M-2.3) to 1 000 ml with water. The solution should be prepared freshly as

required. This solution contains $0.000\ 004\ g$ of iron per millilitre (1 ml = $0.004\ mg\ Fe$).

M-3 Procedure

M-3.1 Pipette out 20 ml of the solution prescribed in **C-2** into a Nessler cylinder. Dilute to 20 ml with water and add 4 drops of thioglycollic acid followed by 1 ml concentrated ammonium hydroxide. Carry out a control test in another Nessler cylinder using 5 ml of dilute standard iron solution and the same quantities of other reagents. Dilute the solution in both the cylinders to 50 ml and mix well.

M-3.2 The requirement specified in Table 1 shall be taken as not having been exceeded, if the intensity of colour produced with the material is not greater than that obtained in the control test.

ANNEX N

(Clause 6)

METHODS OF SAMPLING OF IODIZED SALT AND REFINED IODIZED SALT

N-1 GENERAL REQUIREMENTS OF SAMPLING

N-1.0 In drawing, storing, preparing and handling test samples, the following precautions shall be observed.

N-1.1 Samples shall not be taken at an exposed place.

N-1.2 Precautions shall be taken to protect the samples, the sampling instrument and the containers for samples from adventitious contamination.

N-1.3 To draw a representative sample, the contents of each container selected for sampling shall be mixed thoroughly by suitable means.

N-1.4 The sample shall be placed in suitable, clean, dry and air-tight glass containers.

N-1.5 Each sample container shall be sealed air-tight after filling and marked with full details of sampling, the date of sampling and year of manufacture.

N-2 SCALE OF SAMPLING

N-2.1 Lot

All the packages in a single consignment of iodized salt drawn from a single batch of manufacture shall constitute a lot. If the consignment consists of different batches, the batches shall be marked separately and the group of containers in each batch shall constitute separate lots.

N-2.1.1 The number of packages (n) to be selected from the lot shall depend upon the size of the lot (N) and shall be in accordance with Table 2.

Table 2 Number of Packages to be Selected for Sampling

Lot Size	No. of Packages to be Selected
(N)	(n)
(1)	(2)
4 to 50	3
51 to 100	4
101 to 150	5
151 to 300	7
301 and above	10

NOTE — When the size of the lot is 3 or less, the number of packages to be selected and the criterion for judging conforming of the lot to the specification shall be as agreed to between the purchaser and the supplier.

N-2.1.2 These packages shall be selected at random from the lot, and to ensure randomness of selection, a random number table (*see* IS 4905) may be used.

N-3 PREPARATION OF TEST SAMPLES

N-3.1 Packages

N-3.1.1 From each of the packages selected in accordance with N-2.1.2, a portion of the material (about 200 g) shall be drawn with the help of a suitable sampling instrument.

N-3.1.2 Out of these portions, equal quantities of the material shall be taken and mixed thoroughly to form a composite sample of about 600 g. The composite samples shall be divided into three equal parts, namely, one for the purchaser, one for the supplier and the third to be used as a referee sample.

N-3.1.3 The remaining portion of the material from each container shall be divided into three equal parts, each forming an individual sample. One set of individual sample representing the container samples shall be marked for the purchaser, another for the supplier and the third to be used as a referee sample.

N-3.2 All the individual samples and the composite sample shall be transferred to separate sample containers. All the containers shall be sealed and labelled with full identification particulars.

N-3.3 The referee test samples consisting of a composite sample and a set of individual samples shall bear the seal of both the purchaser and the supplier. They shall be kept at a place agreed to between the purchaser and the supplier, to be used in case of dispute.

N-4 NUMBER OF TESTS

N-4.1 Tests for the determination of moisture content, chloride content (as NaCl) and level 1 of iodine shall be performed on each of the individual samples.

N-4.2 Tests for the determination of all other characteristics given under 4 shall be performed on the composite sample (see N-3.1.2).

N-5 CRITERIA FOR CONFORMITY

N-5.1 For Individual Samples

From the test results the average (x) and the range (R)or (\overline{R}) shall be computed for each of the characteristics mentioned in N-4.1. Range (R) is defined as the difference between the maximum and the minimum values of the individual test results. Range (\overline{R}) is the average of two ranges calculated on each of the two sets of five consecutive test results when the total number of test results on a characteristic is 10. The criteria for conformity of the lot in respect of each of these characteristics is that (x - 0.6R) or $(x - 0.6\overline{R})$ should be greater than or equal to the corresponding minimum requirements specified under 4.

N-5.2 For Composite Samples

The lot shall be considered to have passed in respect

of the characteristics tested on the composite test sample, if the test results satisfy the corresponding requirements given under 4.

N-5.3 The lot shall be considered as conforming to the specification if it satisfies all the criteria given in N-5.1 and N-5.2.

Bureau of Indian Standards

BIS is a statutory institution established under the *Bureau of Indian Standards Act*, 1986 to promote harmonious development of the activities of standardization, marking and quality certification of goods and attending to connected matters in the country.

Copyright

BIS has the copyright of all its publications. No part of these publications may be reproduced in any form without the prior permission in writing of BIS. This does not preclude the free use, in the course of implementing the standard, of necessary details, such as symbols and sizes, type or grade designations. Enquiries relating to copyright be addressed to the Director (Publications), BIS.

Review of Indian Standards

Amendments are issued to standards as the need arises on the basis of comments. Standards are also reviewed periodically; a standard along with amendments is reaffirmed when such review indicates that no changes are needed; if the review indicates that changes are needed, it is taken up for revision. Users of Indian Standards should ascertain that they are in possession of the latest amendments or edition by referring to the latest issue of 'BIS Catalogue' and 'Standards : Monthly Additions'.

This Indian Standard has been developed from Doc : No. FAD 8 (1435).

Amendments Issued Since Publication Amend No. Date of Issue Text Affected **BUREAU OF INDIAN STANDARDS** Headquarters : Manak Bhavan, 9 Bahadur Shah Zafar Marg, New Delhi 110 002 Telegrams : Manaksanstha Telephones : 2323 01 31, 2323 33 75, 2323 94 02 (Common to all offices) **Regional Offices :** Telephone Central : Manak Bhavan, 9 Bahadur Shah Zafar Marg 2323 76 17 **NEW DELHI 110 002** 2323 38 41 Eastern : 1/14 C.I.T. Scheme VII M, V. I. P. Road, Kankurgachi 2337 84 99, 2337 85 61 **KOLKATA 700 054** 2337 86 26, 2337 91 20 Northern : SCO 335-336, Sector 34-A, CHANDIGARH 160 022 260 38 43 260 92 85 Southern : C.I.T. Campus, IV Cross Road, CHENNAI 600 113 2254 12 16, 2254 14 42 2254 25 19, 2254 23 15 Western : Manakalaya, E9 MIDC, Marol, Andheri (East) 2832 92 95, 2832 78 58 MUMBAI 400 093 2832 78 91, 2832 78 92 Branches : AHMEDABAD, BANGALORE, BHOPAL, BHUBANESHWAR, COIMBATORE, FARIDABAD,

GHAZIABAD. GUWAHATI. HYDERABAD. JAIPUR. KANPUR. LUCKNOW. NAGPUR. NALAGARH. PATNA. PUNE. RAJKOT. THIRUVANANTHAPURAM. VISAKHAPATNAM.

AMENDMENT NO. 1 JANUARY 2009 TO IS 7224 : 2006 IODIZED SALT, VACUUM EVAPORATED IODIZED SALT AND REFINED IODIZED SALT — SPECIFICATION

(Second Revision)

(Page 9, Annex K) — Substitute the following for the existing:

ANNEX K

[Table 1, Sl No. (x)]

DETERMINATION OF LEAD

K-1 Two methods have been specified for determination of lead - the chemical method and the atomic absorption spectrophotometric method. The atomic absorption spectrophotometric method shall be taken as referee method.

K-2 CHEMICAL METHOD

K-2.1 Apparatus

K-2.1.1 Nessler Cylinders, 50-ml capacity.

K-2.1.2 Reagents

K-2.1.2.1 Acetic acid, approximately 33 percent (v/v).

K-2.1.2.2 Dilute ammonium hydroxide, approximately 4 N.

K-2.1.2.3 Potassium cyanide solution — Dissolve 10 g of potassium cyanide in 90 ml of water, add 2 ml of hydrogen peroxide (20 volume strength), allow to stand for 24 h and make up to 100 ml with water.

K-2.1.2.4 Sodium sulphide solution — Dissolve 10 g of sodium sulphide $(Na_2S.9H_2O)$ in 100 ml of water.

K-2.1.2.5 Standard lead solution — Dissolve 0.160 g of lead nitrate in 5 ml of concentrated nitric acid (conforming to IS 264) and dilute to 100 ml in a graduated flask. Again dilute 10 ml of the solution to 1 000 ml. One millilitre of the solution finally obtained contains 0.01 mg of lead (as Pb).

K-2.1.3 Procedure

K-2.1.3.1 Dissolve 4 g of the dried sample (see C-1) in water in a Nessler cylinder and add 5 ml of acetic acid. Make the mixture alkaline with dilute

Amend No. 1 to IS 7224 : 2006

arimonium hydroxide and add 1 ml of potassium cyanide solution. If turbid, filter. Add two drops of sodium sulphide solution and mix well. Carry out a control test in another Nessler cylinder in exactly the same manner but using 1 ml of standard lead solution in place of the dried sample. Dilute the solution in both the cylinders to 50-ml mark. Compare the colour produced in the two cylinders against a white background.

K-2.1.3.2 The material shall be taken to have not exceeded the limit specified in Table 1 if the intensity of colour obtained with the material is not greater than that obtained in the control test.

K-3 ATOMIC ABSORPTION SPECTROPHOTOMETRIC METHOD

K-3.1 Principle

Test portions are dried and then ashed at 450° C under a gradual increase (about 50° C/h) in temperature, 6 N HCl (1+1) is added and the solution is evaporated to dryness. The residue is dissolved in 0.1N HNO₃ and the analyte is determined by flame and graphite procedures.

K-3.2 Apparatus

K-3.2.1 Atomic Absorption Spectrophotometer, with an air-acetylene burner or nitrous oxide-acetylene burner for flame and a graphite furnace for electrothermal determinations with appropriate background (non-atomic correction). Instrument parameters are usually given by the manufacturer in the manual provided with the instrument.

K-3.2.2 Hollow cathode or electrodeless discharge lamps for all elements.

K-3.2.3 Furnace, programmable or muffle furnace with thermostat maintaining $450 \pm 25^{\circ}$ C.

K-3.2.4 Hot Plate, with heating control to heat up to 300°C

K-3.2.5 Quartz or Platinum Dishes

K-3.2.6 Polystyrene Bottles, with leak proof closures - 100 ml

NOTE — Carefully clean and rinse all glassware and plastic ware with HNO_3 or HCl to avoid metal contamination. First wash with water and detergent, rinse with tap water, followed by distilled water, then with dilute acid (1+9) and finally 3-4 times with distilled water.

K-3.3 Reagents

- K-3.3.1 Water, redistilled or deionized
- K-3.3.2 20 Percent Sulphuric Acid

K-3.3.3 Hydrochloric Acid A.R. (6N) — Dilute 500 ml hydrochloric acid to one litre with water.

K-3.3.4 Nitric Acid A.R. 0.1M - Dilute 7 ml concentrated acid to one litre.

K-3.3.5 Nitric Acid Concentrated (Sp. Grade 1.40)

K-3.3.6 Lead Standard Solution -1 mg/ml — Dissolve 1.000 g Pb in 7 ml concentrated HNO₃ in one litre volumetric flask. Dilute to volume with water. Commercially available standard solutions for AAS may be used for all metal standards.

K-3.3.7 Working Standard Solution — For graphite furnace analysis dilute standard solutions with 0.1 M HNO₃ to a range of standards that cover the linear range of the elements to be determined. For Flame analysis dilute standard solutions with 0.1 M HNO₃ to a range of standards that covers the concentration of the elements to be determined.

K-3.4 Procedure

K-3.4.1 Preparation of Sample

Weigh accurately about 25 g of well homogenized sample into a clean silica dish. Add 25 ml of 20 percent sulphuric acid. Mix thoroughly with a glass stirring rod ensuring all sample material is wetted by the acid. Rinse stirring rod with water into silica dish. Dry the contents of the dish thoroughly on a steam bath or in an oven around 110°C. When the sample is thoroughly dried, heat the contents of the dish with a soft flame (such as that of a Bunsen burner) until all volatile or readily combustible matter has been removed. Transfer the dish to a furnace set at 250°C. Slowly raise temperature to 500°C. Ash at this temperature for about 6 to 8 hours. Remove the dish and cool. Ash should now be white or brownish red and essentially be carbon free. If ash contains carbon particles, wash down sides of dish with water and add 2 ml of HNO3 and mix well. Dry thoroughly on hot plate. Return dish to furnace at 500°C and ash for 30 min. Repeat nitric acid treatment using 1 ml increments of HNO3 until white/brownish red, carbon free ash is obtained. When clean ash is obtained, remove the dish from furnace, cool and add 1 ml HNO₃ and 10 ml of water. Heat on hot plate till sample ash is dissolved. Quantitatively transfer the contents of the dish to a 100-ml volumetric flask, heat the dish with 10 ml of HCl (1+1) and transfer the solution again to the same volumetric flask to volume with water.

Prepare sample blank solution by following the same procedure as described for sample. Use same quantities of reagents including water for both sample and

Amend No. 1 to IS 7224 : 2006

blank. Subject both sample and sample blank to identical treatment (even the length of time kept in furnace etc.)

NOTES

I Do not ash HNO_3 in furnace. Always dry HNO_3 (in the dish) on steam bath or hot plate and then ash in furnace.

2 Do not allow sample to ignite during any stage of ashing.

3 If the calcium content of the sample is high, then avoid the use of sulphuric acid (Ash aid) and ash at temperatures not exceeding 470°C.

K-3.4.2 Determination

Atomic Absorption Spectrophotometry — Lead in foods generally requires graphite furnace AAS (GFAAS) for determination.

- a) Set the instrument as per the previously established optimum conditions/as per the guidelines given in the Instruction Manual (provided along with the instrument). The standard conditions for Atomic Absorption Spectrophotometer are wavelength of 217.0 and air acetylene as flame-gases.
- b) Determine absorbance of sample solution(s) and blank.
- c) Calculate the heavy metal content from standard curve.

K-3.4.3 Preparation of Standard Curve

Read the absorbance of a series of standard metal solutions in the Atomic Absorption Spectrophotometer after setting the instrument as per optimum conditions. Plot absorbance against μ g of metal/ml solution.

(FAD 8)

Reprography Unit, BIS, New Delhi, India